



# CAN-Wiring

## Guide to Wiring of CAN-Bus Systems and Cable Selection

## Notes

The information in this document has been carefully checked and is believed to be entirely reliable. esd electronics makes no warranty of any kind with regard to the material in this document and assumes no responsibility for any errors that may appear in this document. In particular descriptions and technical data specified in this document may not be constituted to be guaranteed product features in any legal sense.

esd electronics reserves the right to make changes without notice to this, or any of its products, to improve reliability, performance or design.

All rights to this documentation are reserved by esd electronics. Distribution to third parties, and reproduction of this document in any form, whole or in part, are subject to esd electronics' written approval.

© 2025 esd electronics gmbh, Hannover

**esd electronics gmbh**  
Vahrenwalder Str. 207  
30165 Hannover  
Germany

Tel.: +49-511-37298-0  
Fax: +49-511-37298-68  
E-Mail: [info@esd.eu](mailto:info@esd.eu)  
Internet: [www.esd.eu](http://www.esd.eu)



This manual contains important information and instructions on safe and efficient wiring of CAN networks. Carefully read this manual before commencing any work and follow the instructions.

### Trademark Notices

CANopen® and CiA® are registered EU trademarks of CAN in Automation e.V.  
All other trademarks, product names, company names or company logos used in this manual are reserved by their respective owners.

# Document Information

Document file:	I:\Texte\Doku\MANUALS\CAN\VERDRAHT\Englisch\CAN-Wiring-Notes_en_46.docx
Date of print:	2025-11-27
Document-type number:	QM.1012.C.1300.02

## Document History

The changes in the document listed below affect changes in the hardware as well as changes in the description of the facts, only.

Revision	Chapter	Changes versus previous version	Date
4.0	-	Text imported in OpenOffice and completely revised	2012-09-19
		“Correct Wiring” and “Troubleshooting Guide” text segments inserted	
4.1	1.5	Wiring length for bit rate 83,3 kbit/s inserted and editorially revising	2013-11-20
4.2	1.1	Chapter “1.1 Standards concerning CAN wiring” inserted.	2014-12-04
	-	New CAN termination connector “CAN-Termination-DSUB9” inserted.	
	1.8	Chapter “1.7 Effective Resistance of the Cable” deleted because effect of cable effective resistance is negligible in practical applications.	
4.3	-	Classification of Warning Messages and Safety Instructions inserted	2016-05-06
	1.3.3, 1.4.3, 3.	“(Gender Changer)” deleted	
	1.6	Reference to CiA 303-1 inserted in note and CiA recommendations of cable cross-section inserted in table 1	
4.4	1.3.3	New chapter “Branching”	2018-01-16
	1.4.2	Notes on T-Connector moved to chapter 1.4.3 “Branching”	
	1.4.3	New chapter “Branching”	
4.5	1.	Note on CAN FD inserted	2018-05-08
4.6	all	Text imported in Word and revised	2022-06-14
	-	Notes on page 4 inserted	
	1.6	Description to bus length taken from the website. Note to CiA 106 inserted	
	2.	Complete chapter revised, changes taken from the website, resistance value under “Expected Result” changed in chapter 2.5	
4.7	all	Minor editorial changes	2025-11-27

Technical details are subject to change without further notice.

## Target Group of this Document

This document is directed exclusively towards personnel qualified in control and automation engineering. The installation and commissioning of the product may only be carried out by qualified personnel, which is authorized to put devices, systems, and electric circuits into operation according to the applicable national standards of safety engineering.

## Conformity

The accessories for CAN wiring (CAN cables and connectors, see ordering information) are industrial products and comply with the respective directives and standards specified in their EU declarations of conformity.

## Intended Use

The intended use of the CAN cables and connectors is the use for setting up the CAN wiring. The guarantee given by esd does not cover damages which result from improper use, usage not in accordance with regulations or disregard of safety instructions and warnings.

- The accessories for the CAN wiring are intended for indoor use only.
- The operation of the accessories for the CAN-Wiring in hazardous areas, or areas exposed to potentially explosive materials is not permitted.
- Usage for medical purposes is prohibited.

## Service Note

The accessories for the CAN-Wiring do not contain any parts that require maintenance by the user and they do not require any manual configuration. Unauthorized intervention in the accessories voids warranty claims

## Disposal



Products marked with a crossed-out dustbin must not be disposed of with household waste. Devices which have become defective in the long run must be disposed in an appropriate way or must be returned to the manufacturer for proper disposal. Please, contribute to environmental protection.

---

## Classification of Warning Messages and Safety Instructions

This manual contains noticeable descriptions, warning messages and safety instructions, which you must follow to avoid personal injuries and property damage.

### NOTICE

Notice statements are used to notify people on hazards that could result in things other than personal injury, like property damage.



#### NOTICE

This NOTICE statement contains the general mandatory sign and gives information that must be heeded and complied with for a safe use.

### INFORMATION



#### INFORMATION

Notes to point out something important or useful.

## Table of Contents

1	Correct Wiring of Galvanically Isolated CAN Networks	6
1.1	CAN Wiring Standards	6
1.2	Selecting Cables	7
1.3	Light industrial Environment (Single twisted Pair Cable)	8
1.3.1	General Rules	8
1.3.2	Cabling	9
1.3.3	Branching	9
1.3.4	Termination Resistor	9
1.4	Heavy industrial Environment (Double twisted Pair Cable)	10
1.4.1	General Rules	10
1.4.2	Device Cabling	11
1.4.3	Branching	11
1.4.4	Termination Resistor	11
1.5	Electrical Grounding	12
1.6	Bus Length	12
1.7	Examples for CAN Cables	13
1.7.1	Cable for Light Industrial Environment Applications (Two-Wire)	13
1.7.2	Cable for Heavy Industrial Environment Applications (Four-Wire)	13
2	CAN Troubleshooting Guide	14
2.1	Termination	14
2.2	Electrical Grounding	15
2.3	Short Circuit in CAN Wiring	15
2.4	Correct Voltage Levels on CAN_H and CAN_L	15
2.5	CAN Transceiver Resistance Test	16
2.6	Support by esd	16
3	Order Information	17

## List of Tables

Table 1: Recommended cable lengths at typical bit rates (with esd-CAN interfaces)	12
Table 2: Order information accessories	18
Table 3: Available Manuals	18

## List of Figures

Figure 1: CAN wiring for light industrial environment	8
Figure 2: Example for proper wiring with single shielded single twisted pair wires	9
Figure 3: CAN wiring for heavy industrial environment	10
Figure 4: Example of proper wiring with single shielded double twisted pair cables	11
Figure 5: Simplified diagram of a CAN network	14
Figure 6: Simplified schematic diagram of ground test measurement	15
Figure 7: Measuring the internal resistance of CAN transceivers	16

# 1 Correct Wiring of Galvanically Isolated CAN Networks



## NOTICE

This chapter applies to CAN networks with bit rates up to 1 Mbit/s.

If you work with higher bit rates, as for example used for CAN FD, the information given in this chapter must be examined for applicability in each individual case.

For further information refer to the CiA® CAN FD guidelines and recommendations (<https://www.can-cia.org/>).

For the CAN wiring all applicable rules and regulations (EU, DIN), such as regarding electromagnetic compatibility, security distances, cable cross-section or material, must be obeyed.

## 1.1 CAN Wiring Standards

The flexibility in CAN network design is a major strength of the various extensions based on the original CAN standard ISO 11898-2, such as CANopen®, ARINC825, DeviceNet® and NMEA2000. However, taking advantage of this flexibility absolutely requires a network design that considers the interactions of all network parameters.

In some cases, the CAN organizations have adapted the scope of CAN in their specifications to enable applications outside the ISO 11898 standard. They have imposed system-level restrictions on data rate, line length and parasitic bus loads.

However, when designing CAN networks, a margin must always be planned for signal losses over the entire system and cabling, parasitic loads, network imbalances, potential differences against earth potential, and signal integrities. **Therefore, the maximum achievable number of nodes, bus lengths and stub lengths may differ from the theoretically possible number!**

esd has limited its recommendations for CAN wiring to the specifications of ISO 11898-2. A description of the special features of the derived specifications CANopen, ARINC825, DeviceNet, and NMEA2000 is omitted here.

The consistent compliance with the ISO 11898-2 standard offers significant advantages:

- Reliable operation due to proven design specifications
- Minimization of error sources due to sufficient distance to the physical limits.
- Easy maintenance because there are no "special cases" to consider for future network modifications and troubleshooting.

Of course, reliable networks can be designed according to the specifications of CANopen, ARINC825, DeviceNet and NMEA2000, **however it is strictly not recommended to mix the wiring guidelines of the various specifications!**

### 1.2 Selecting Cables

The following properties should be considered for the selection of the CAN lines:

**Characteristic impedance**     The characteristic impedance of the cable used should be about 120  $\Omega$ .

**Effective resistance**     The ohmic resistance of the cable must be low enough to reach the voltage-switching threshold of the receiver component at the end of the line. The connected termination resistor and the number of nodes must be considered for determining the voltage drop at the receiver.

**EU Conformity**



**NOTICE**

esd grants the EU Conformity of the product, if the CAN wiring is carried out with the CAN cables that are required for this particular product.

Depending on the product at least single shielded two- or four-wire twisted pair cables must be used, that meet the requirements of ISO 118982-2 standard.

For information on whether the usage of two-wire or four-wire cables is required for a product, please refer to the manual of the respective product.

For instructions about wiring of single shielded two-wire twisted pair cables, please read chapter 1.3.

For instructions about wiring of single shielded four-wire twisted pair cables, please read chapter 1.4

**Bit rate / cable length**     Depending on the signal propagation times of the line, the achievable total line length of a CAN network increases with a decreasing bit rate (see 1.6).

## 1.3 Light industrial Environment (Single twisted Pair Cable)

### 1.3.1 General Rules

The following **general rules** for CAN wiring with single shielded *single* twisted pair cable should be followed:

1	A suitable cable type with a wave impedance of about $120\ \Omega \pm 10\%$ with an adequate conductor cross-section ( $\geq 0.22\ \text{mm}^2$ ) must be used. The voltage drop over the wire must be considered.
2	For light industrial environment use at least a two-wire CAN cable, the wires of which must be assigned as follows: <ul style="list-style-type: none"> <li>• Two twisted wires must be assigned to the data signals (CAN_H, CAN_L).</li> <li>• The cable shield must be connected to the reference potential (CAN_GND).</li> </ul>
3	The reference potential CAN_GND must be connected to the functional earth (FE) at exactly <b>one</b> point.
4	A CAN bus line must not branch (exception: short cable stubs) and must be terminated with the characteristic impedance of the line (generally $120\ \Omega \pm 10\%$ ) at both ends (between the signals CAN_L and CAN_H and <b>not</b> at CAN_GND).
5	Keep cable stubs as short as possible ( $l < 0.3\ \text{m}$ ).
6	Select a working combination of bit rate and cable length.
7	Keep away cables from disturbing sources. If this cannot be avoided, double shielded wires are recommended.

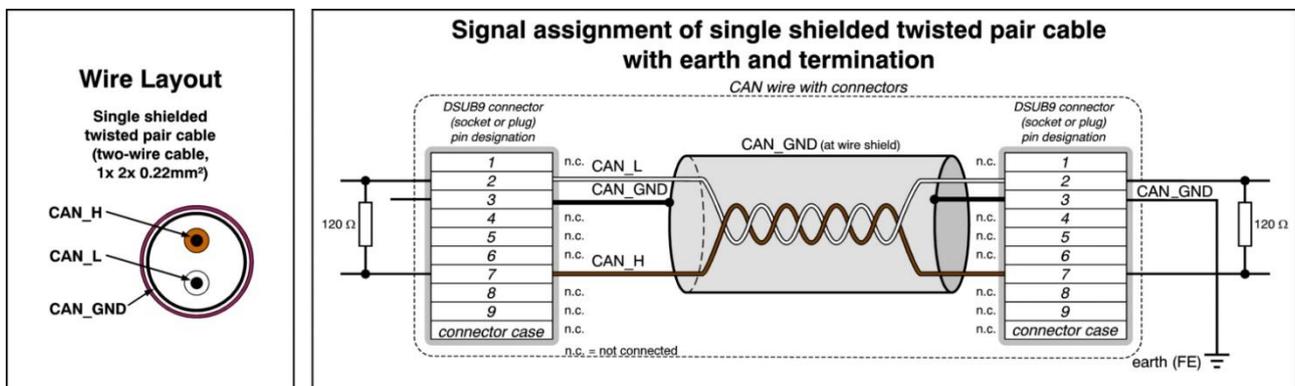


Figure 1: CAN wiring for light industrial environment

## 1.3.2 Cabling

- To connect CAN devices with just one CAN connector per net use a short stub ( $< 0.3$  m) and a T-connector (available as accessory). If these devices are located at the end of the CAN network, the CAN terminator “CAN-Termination-DSUB9” can be used.

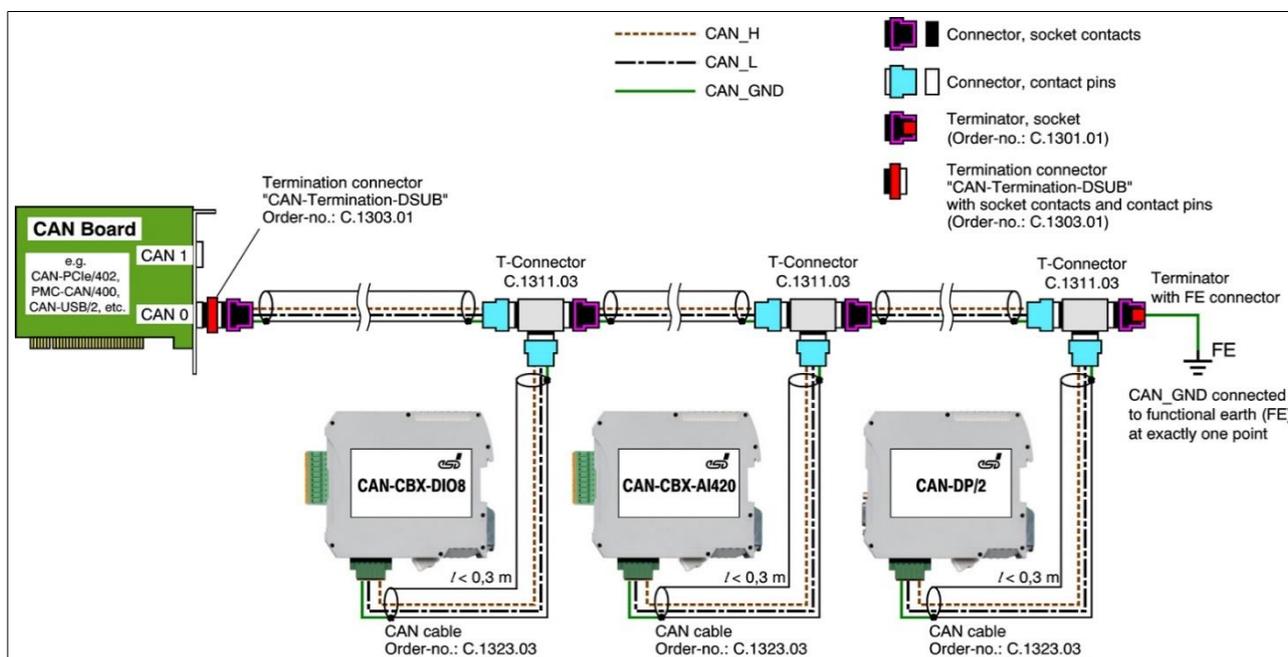


Figure 2: Example for proper wiring with single shielded single twisted pair wires

## 1.3.3 Branching

- In principle the CAN bus must be realized in a line. The nodes are connected to the main CAN bus line via short cable stubs. This is normally realised by so called T-connectors. esd offers the CAN-T-Connector (Order No.: C.1311.03)
- If a mixed application of single twisted and double twisted cables cannot be avoided, ensure that the CAN\_GND line is not interrupted!
- Deviations from the bus structure can be realized by using repeaters.

## 1.3.4 Termination Resistor

- A termination resistor must be connected at both ends of the CAN bus. If an integrated CAN termination resistor is connected to the CAN interface at the end of the CAN bus, this integrated termination must be used instead of an external CAN termination resistor.
- 9-pole DSUB-termination connectors with integrated termination resistor and pin contacts and socket contacts are available from esd (order no. C.1303.01).
- For termination of the CAN bus and grounding of the CAN\_GND, DSUB terminators with pin contacts (order no. C.1302.01) or socket contacts (order no. C.1301.01) and with additional functional earth contact are available.

**i** **INFORMATION**  
 A selection of CAN cables, T-connectors and termination resistor plugs that are available from esd is printed in chapter “Order Information” on page 17.

## 1.4 Heavy industrial Environment (Double twisted Pair Cable)

### 1.4.1 General Rules

The following **general rules** for the CAN wiring with single shielded *double* twisted pair cable should be followed:

1	A suitable cable type with a wave impedance of about $120\ \Omega \pm 10\%$ with an adequate conductor cross-section ( $\geq 0.22\ \text{mm}^2$ ) must be used. The voltage drop over the wire must be considered.
2	For heavy industrial environment use a four-wire CAN cable, the wires of which must be assigned as follows: <ul style="list-style-type: none"> <li>• Two twisted wires must be assigned to the data signals (CAN_H, CAN_L) and</li> <li>• The other two twisted wires must be assigned to the reference potential (CAN_GND).</li> <li>• The cable shield must be connected to functional earth (FE) at least at one point.</li> </ul>
3	The reference potential CAN_GND must be connected to the functional earth (FE) at exactly <b>one</b> point.
4	A CAN bus line must not branch (exception: short cable stubs) and must be terminated with the characteristic impedance of the line (generally $120\ \Omega \pm 10\%$ ) at both ends (between the signals CAN_L and CAN_H and <b>not</b> to CAN_GND).
5	Keep cable stubs as short as possible ( $l < 0.3\ \text{m}$ ).
6	Select a working combination of bit rate and cable length.
7	Keep away CAN cables from disturbing sources. If this cannot be avoided, double shielded cables are recommended.

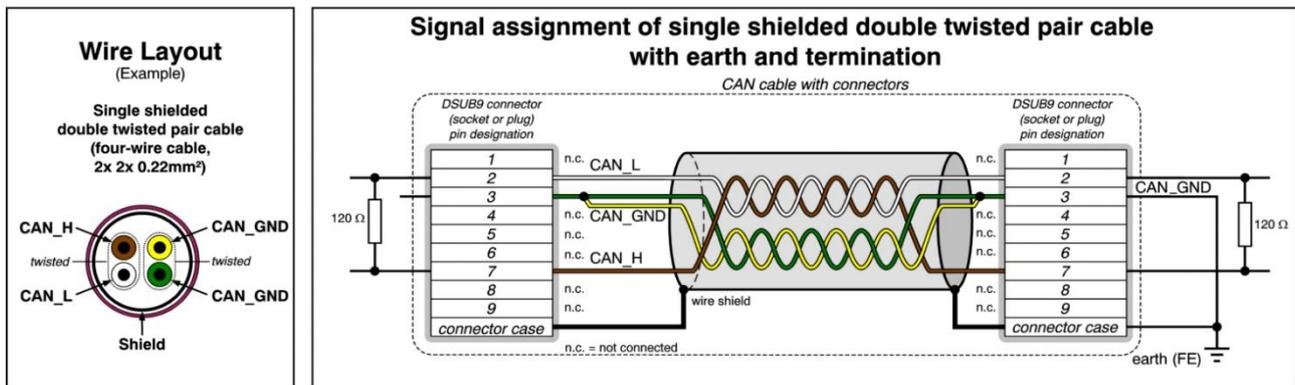


Figure 3: CAN wiring for heavy industrial environment

## 1.4.2 Device Cabling

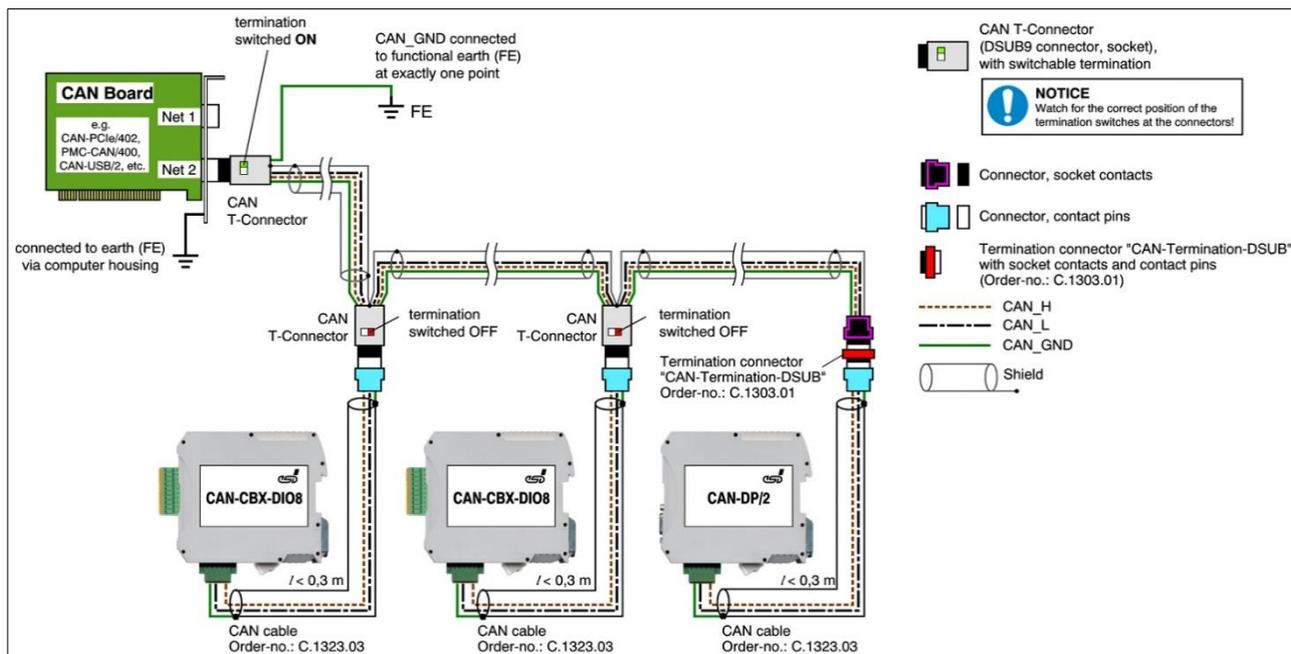


Figure 4: Example of proper wiring with single shielded double twisted pair cables

## 1.4.3 Branching

- In principle, the CAN bus must be realized in a line. The nodes are connected to the main CAN bus line via short cable stubs. This is usually realised via so called T-connectors. When using esd's CAN-T-Connector (order no.: C.1311.03) in heavy industrial environment and with four-wire twisted cables, it must be noted that the shield potential of the conductive DSUB housing is not looped through this type of T-connector. This interrupts the shielding. Therefore, you must take appropriate measures to connect the shield potentials, as described in the manual of the CAN-T-Connector. For further information on this, please refer to the CAN-T-Connector Manual (order no.: C.1311.21). Alternatively, a T-connector can be used, in which the shield potential is looped through, for example the DSUB9 connector from ERNI (ERBIC CAN BUS MAX, order no.:154039).
- If a mixed application of single twisted and double twisted cables cannot be avoided, ensure that the CAN\_GND line is not interrupted!
- Deviations from the bus structure can be realized by using repeaters.

## 1.4.4 Termination Resistor

- A termination resistor must be connected at both ends of the CAN bus. If an integrated CAN termination resistor is connected to the CAN interface at the end of the CAN bus, this integrated termination must be used instead of an external CAN termination resistor.
- 9-pole DSUB-termination connectors with integrated termination resistor and pin contacts and socket contacts are available from esd (order no. C.1303.01).
- 9-pole DSUB-connectors with integrated switchable termination resistor can be ordered for example from ERNI (ERBIC CAN BUS MAX, socket contacts, order no.:154039).

### 1.5 Electrical Grounding

- For CAN devices with galvanic isolation the CAN\_GND must be connected between the CAN devices.
- CAN\_GND should be connected to the earth potential (FE) at **exactly one** point of the network.
- Each *CAN interface with electrical connection to earth potential* acts as a grounding point. For this reason, it is recommended not to connect more than one *CAN device with electrical connection to earth potential*.
- Grounding can be done for example at a termination connector (e.g. order no. C.1302.01 or C.1301.01).

### 1.6 Bus Length

The bus length of a CAN network must be adapted to the set bit rate. The maximum values result from the fact that the time required for a bit to be transmitted in the bus system is shorter the higher the transmission rate is. However, as the line length increases, so does the time it takes for a bit to reach the other end of the bus. It should be noted that the signal is not only transmitted, but the receiver must also respond to the transmitter within a certain time. The transmitter, in turn, must detect any change in bus level from the receiver(s). Delay times on the line, the transceiver, the controller, oscillator tolerances and the set sampling time must be considered.

In the following table you will find guide values for the achievable bus lengths at certain bit rates.

Bit Rate [kbit/s]	Theoretical values of reachable wire length with esd interface $l_{max}$ [m]	CiA recommendations (07/95) for reachable wire lengths $l_{min}$ [m]	Standard values of the cross-section according to CiA 303-1 [mm <sup>2</sup> ]
1000	37	25	0.25 to 0.34
800	59	50	0.34 to 0.6
666. $\bar{6}$	80	-	
500	130	100	
333. $\bar{3}$	180	-	
250	270	250	
166	420	-	0.5 to 0.6
125	570	500	
100	710	650	0.75 to 0.8
83. $\bar{3}$	850	-	
66. $\bar{6}$	1000	-	
50	1400	1000	
33. $\bar{3}$	2000	-	not defined in CiA 303-1
20	3600	2500	
12.5	5400	-	
10	7300	5000	

Table 1: Recommended cable lengths at typical bit rates (with esd-CAN interfaces)

Optical couplers are delaying the CAN signals. esd modules typically achieve a wire length of 37 m at 1 Mbit/s within a proper terminated CAN network without impedance disturbances, such as those caused by cable stubs > 0.3 m.



### NOTICE

Please note that the cables, connectors, and termination resistors used in CANopen networks shall meet the requirements defined in ISO 11898-2.

In addition, further recommendations of the CiA, like standard values of the cross section, depending on the cable length, are described in the CiA recommendation CiA 303-1 (see CiA 303 CANopen Recommendation - Part 1: “Cabling and connector pin assignment,” Version 1.9.0, Table 2). Recommendations for pin-assignment of the connectors are described in CiA 106: “Connector pin-assignment recommendations”.

## 1.7 Examples for CAN Cables

esd recommends the following two-wire and four-wire cable types for CAN network design. These cable types are used by esd for ready-made CAN cables, too.

### 1.7.1 Cable for Light Industrial Environment Applications (Two-Wire)

Manufacturer	Cable Type
U.I. LAPP GmbH Schulze-Delitzsch-Straße 25 70565 Stuttgart Germany <a href="http://www.lappkabel.com">www.lappkabel.com</a>	e.g. UNITRONIC ®-BUS CAN UL/CSA (1x 2x 0.22) (UL/CSA approved) <span style="float: right;">Part No.: 2170260</span>
	UNITRONIC ®-BUS-FD P CAN UL/CSA (1x 2x 0.25) (UL/CSA approved) <span style="float: right;">Part No.: 2170272</span>
ConCab GmbH Äußerer Eichwald 74535 Mainhardt Germany <a href="http://www.concab.de">www.concab.de</a>	e. g. BUS-PVC-C (1x 2x 0.22 mm <sup>2</sup> ) <span style="float: right;">Order No.: 93 022 016 (UL appr.)</span>
	BUS-Schleppflex-PUR-C (1x 2x 0.25 mm <sup>2</sup> ) <span style="float: right;">Order No.: 94 025 016 (UL appr.)</span>

### 1.7.2 Cable for Heavy Industrial Environment Applications (Four-Wire)

Manufacturer	Cable Type
U.I. LAPP GmbH Schulze-Delitzsch-Straße 25 70565 Stuttgart Germany <a href="http://www.lappkabel.com">www.lappkabel.com</a>	e.g. UNITRONIC ®-BUS CAN UL/CSA (2x 2x 0.22) (UL/CSA approved) <span style="float: right;">Part No.: 2170261</span>
	UNITRONIC ®-BUS-FD P CAN UL/CSA (2x 2x 0.25) (UL/CSA approved) <span style="float: right;">Part No.: 2170273</span>
ConCab GmbH Äußerer Eichwald 74535 Mainhardt Germany <a href="http://www.concab.de">www.concab.de</a>	e. g. BUS-PVC-C (2x 2x 0.22 mm <sup>2</sup> ) <span style="float: right;">Order No.: 93 022 026 (UL appr.)</span>
	BUS-Schleppflex-PUR-C (2x 2x 0.25 mm <sup>2</sup> ) <span style="float: right;">Order No.: 94 025 026 (UL appr.)</span>



### INFORMATION

Ready-made CAN cables with standard or custom length can be ordered from **esd**.

## 2 CAN Troubleshooting Guide

The CAN Troubleshooting Guide is a guide to finding and eliminating the most common problems and errors when setting up CAN bus networks and CAN-based systems.

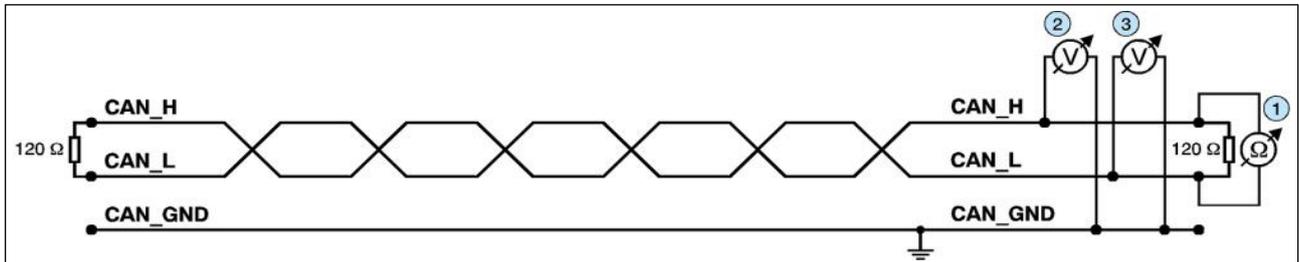


Figure 5: Simplified diagram of a CAN network

### 2.1 Termination

The bus termination is used to match impedance of a node to the impedance of the bus line used. If the impedance is mismatched, the transmitted signal is not completely absorbed by the load and will be partially reflected back into the transmission line.

If the impedances of the sources, transmission lines and loads are equal, the reflections are avoided. This test measures the total resistance of the two CAN data lines and the connected terminating resistors.

**To test this, please proceed as follows:**

1. Switch off the supply voltages of all connected CAN nodes.
2. Measure the DC resistance between CAN\_H and CAN\_L at one end of the network, measuring point ① (see figure above).

**Expected result:**

The measured value should be between 50 Ω and 70 Ω.

**Possible causes of error:**

- If the determined value is below 50 Ω, please make sure that:
  - There is no **short circuit** between CAN\_H and CAN\_L wiring.
  - **No more than two** terminating resistors are connected.
  - The transceivers of the individual nodes are not defective.
- If the determined value is higher than 70 Ω, please make sure that:
  - All CAN\_H and CAN\_L lines are correctly connected.
  - Two terminating resistors of 120 Ω each are connected to your CAN network (one at each end).

## 2.2 Electrical Grounding

The CAN\_GND of the CAN network should be connected to the functional earth potential (FE) at only **one** point. This test indicates whether the CAN\_GND is grounded at one or more points.


Please note that this test can only be performed with galvanically isolated CAN nodes.

**To test this, please proceed as follows:**

1. Disconnect the CAN\_GND from the earth potential (FE).
2. Measure the DC resistance between CAN\_GND and earth potential (see figure on the right).

Do not forget to reconnect CAN\_GND to earth potential after the test!

Figure 6: Simplified schematic diagram of ground test measurement

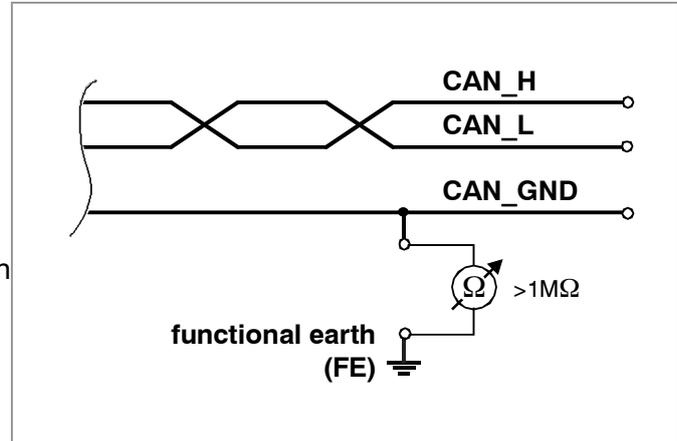

**Expected result:**

The measured resistance should be greater than 1 MΩ. If it is smaller, please search for additional grounding of the CAN\_GND wires.

## 2.3 Short Circuit in CAN Wiring

A CAN bus might possibly still be able to transmit data even if CAN\_GND and CAN\_L are short-circuited. However, this will usually cause the error rate to rise sharply. Ensure that there is no short circuit between CAN\_GND and CAN\_L!

## 2.4 Correct Voltage Levels on CAN\_H and CAN\_L

Each node contains a CAN transceiver that outputs differential signals. When the network communication is idle the CAN\_H and CAN\_L voltages are approximately 2.5 V measured to CAN\_GND. Defective transceivers can cause the idle voltages to vary and disrupt network communication.

**To test for defective transceivers, please proceed as follows:**

1. Switch on all supply voltages.
2. Terminate all network communication.
3. Measure the DC voltage between CAN\_H and CAN\_GND, measuring point ②. (See “Simplified diagram of a CAN network” on previous page).
4. Measure the DC voltage between CAN\_L and CAN\_GND, measuring point ③. (See “Simplified diagram of a CAN network” on previous page).

**Expected result:**

The measured voltage should be between 2.0 V and 3.0 V.

## CAN Troubleshooting Guide

### Possible causes of error:

- If the voltage is lower than 2.0 V or higher than 3.0 V, it is possible that one or more nodes have defective transceivers.
  - If the voltage is lower than 2.0 V, please check the connections of the CAN\_H and CAN\_L lines.
- To find a node with a defective transceiver within a network, please check individually the resistances of the CAN transceivers of the nodes (see next section).

## 2.5 CAN Transceiver Resistance Test

CAN transceivers have circuits that control CAN\_H and CAN\_L. Experience shows that electrical damage can increase the leakage current in these circuits.

**To measure the current leakage through the CAN circuits, please use an ohmmeter and proceed as follows:**

1. Switch **off** the node ④ and **disconnect** it from the CAN network.  
(See figure below.)
2. Measure the DC resistance between CAN\_H and CAN\_GND, measuring point ⑤  
(See figure below.)
3. Measure the DC resistance between CAN\_L and CAN\_GND, measuring point ⑥  
(See figure below.)

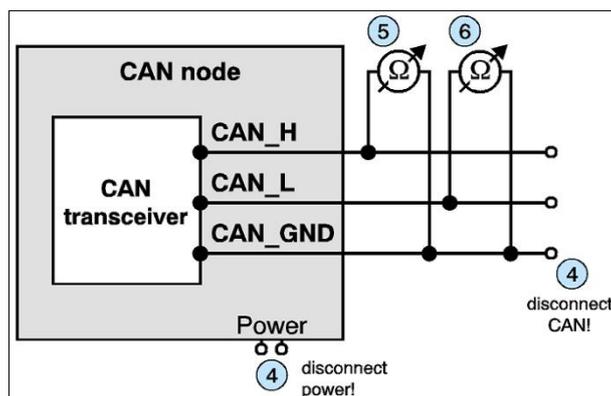


Figure 7: Measuring the internal resistance of CAN transceivers

### Expected result:

The measured resistance should be greater than 10 k $\Omega$  for each measurement.

### Possible causes of error:

- If the resistance is significantly lower, the CAN transceiver may be defective.
- Another indication of a defective CAN transceiver is a very high deviation of the two measured input resistances (>> 200 %).

## 2.6 Support by esd

If you have followed the troubleshooting steps in this troubleshooting guide and still cannot find a solution to your problem, our support team can help.

Please contact our support by email to [support@esd.eu](mailto:support@esd.eu) or by phone **+49-511-37298-130**.

### 3 Order Information

Type	Properties	Order No.
<b>Accessories</b>		
CAN-Termination-DSUB9 	Small termination connector, termination resistance of 120 Ω in a 9-pin DSUB-connector with pin contacts at one side and socket contacts at the other side	C.1303.01
CAN-Termination 	Terminating impedance in 9-pole DSUB-connector (socket contacts) with a 4.8 mm fast-on plug to ground the reference potential CAN_GND	C.1301.01
CAN-Termination 	Terminating impedance in 9-pole DSUB-connector (pin contacts) with a 4.8 mm fast-on plug to ground the reference potential CAN_GND	C.1302.01
CAN-T-Connector 	T-connector, 2 x DSUB9 with socket contacts and 1 x DSUB9 with pin contacts	C.1311.03
<b>Cables</b>		
CAN-Cable-SB, 0.3 m	CAN-cable with two DSUB9-connectors (Grade 3 quality), 1 x socket contact, 1 x pin contact, single twisted pair, dimension 2 x 0.22 mm <sup>2</sup>	C.1322.03
CAN-Cable-SB, 0.5 m		C.1322.05
CAN-Cable-SB, 1.0 m		C.1322.10
CAN-Cable-SB, 2.0 m		C.1322.20
CAN-Cable-SB, 3.0 m		C.1322.30
CAN-Cable-SB, 4.0 m		C.1322.40
CAN-Cable-SB, 5.0 m		C.1322.50
CAN-Cable-SB, 10.0 m		C.1322.99

## Order Information

Type	Properties	Order No.
CAN-Cable-S, 0.3 m (plug) 	CAN-cable with 1x DSUB9 plug (Grade 3 quality) and 3 wire end sleeves, single twisted pair, dimension 2 x 0.22 mm <sup>2</sup>	C.1323.03
CAN-Cable-B, 0.3 m (socket) 	CAN-cable with 1x DSUB9 socket (Grade 3 quality) and 3 wire end sleeves, single twisted pair, dimension 2 x 0.22 mm <sup>2</sup>	C.1323.04
CAN-Cable-BB, customised length	CAN-cable with two DSUB9-connectors (Grade 3 quality), 2 x socket contacts, single twisted pair, dimension 2 x 0.22 mm <sup>2</sup>	C.1321.00
CAN-Cable-BB, 1.0 m		C.1321.10
CAN-Cable-BB, 2.0 m		C.1321.20
CAN-Cable-SS, customised length	CAN-cable with two DSUB9-connectors (Grade 3 quality), 2 x pin contacts, single twisted pair, dimension 2 x 0.22 mm <sup>2</sup>	C.1320.00
CAN-Cable-SS, 1.0 m		C.1320.10
CAN-Cable-SS, 2.0 m		C.1320.20

Table 2: Order information accessories

### PDF Manuals

For the availability of the manuals see table below.

Please download the manuals as PDF documents from our esd website <https://www.esd.eu> for free.

Manuals		Order No.
CAN-Wiring-ME	Wiring Notes in English (this manual)	[Kommentare].02
CAN-Verdrahtungshinweise-MD	Wiring Notes in German	[Kommentare].01

Table 3: Available Manuals

### Printed Manuals

If you need a printout of the manual additionally, please contact our sales team ([sales@esd.eu](mailto:sales@esd.eu)) for a quotation. Printed manuals may be ordered for a fee.